

Access level	Definition & rights
LVL1	Stand by level
LVL2	Restricted USER level where it is only possible to arm/disarm the system.
LVL3	USER level where it is possible to arm/disarm the system, check the event log, test the devices. Modifications of the setting are not possible at this level. User LVL3 can create LVL3 or LVL2 access codes.
LVL4	INSTALLER level where it is possible to modify the setup of the panel. The approval of a LVL3 or LVL2 is required to modify the level for LVL4. Installer LVL4 can create the first LVL3 access code only.

Configuration of Special Arming Modes:

To configure or modify a special arming mode, with the direction arrow go to the menu:

CONFIGURATION (LEVEL 4) + [YES] → ALARM MODES PROGRAMMABLE + [YES] → FULLY ARMED, SP1 and SP2 (use direction arrows to select the arming mode you want to modify + [YES]).

For each arming mode, it is possible to specify how each of the 4 areas will be armed and how the system will behave during an alarm.

Areas: 1 2 3 4 Each time you press the corresponding number, the system will toggle the arming

States: A A A A state for the respective area.

Press the [YES] key after this configuration step. The system will then display what siren mode will be in effect for this special profile. Select the siren mode using the direction arrows then press [YES].

A	Armed
D	Disarmed
P	Perimeter (all the opening contacts)
E	External (opening contacts protecting an exterior access)

Siren	Immediate triggering of all sirens
Delay beeps	Entry/Exit delay/beeps, then triggering of the sirens
Silent	Without siren, without beeps
Without siren	Beeps on the keypad only